
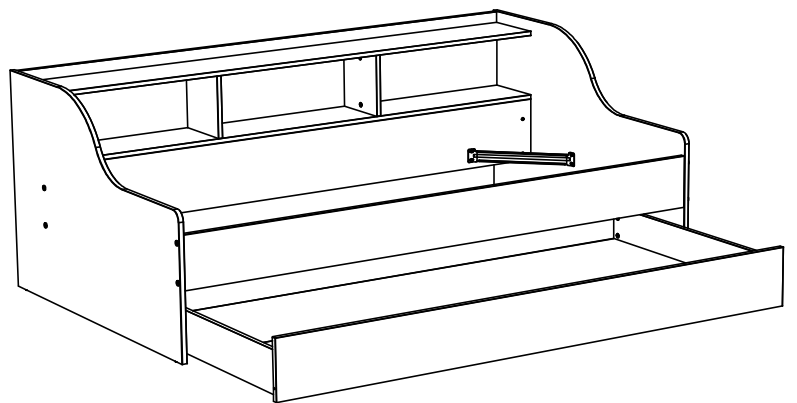



Notice à lire attentivement et à conserver pour consultation ultérieure.
Read carefully Instructions and keep for future reference.
Anweisungen sorgfältig lesen und für zukünftige Zwecke aufbewahren.

!" "#

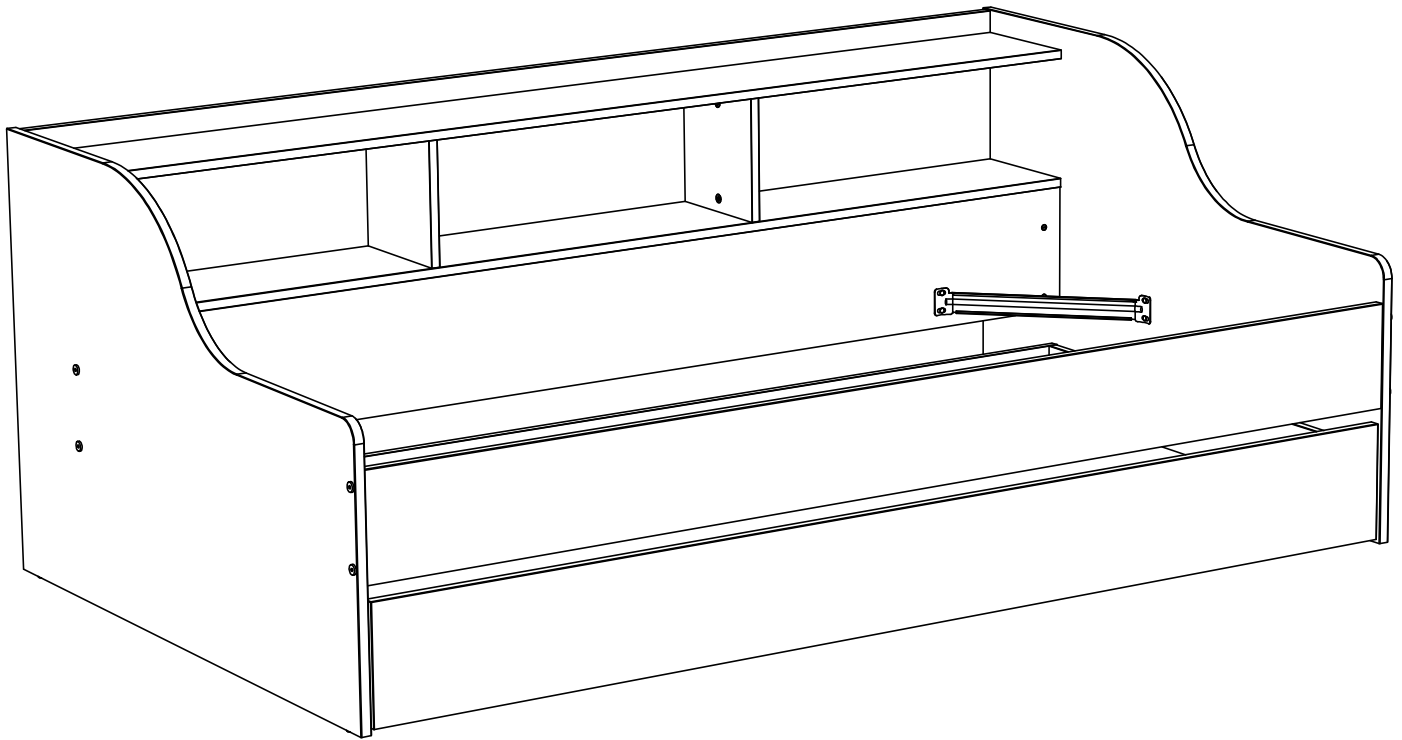








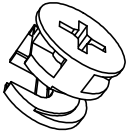
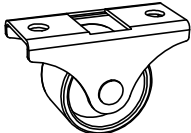

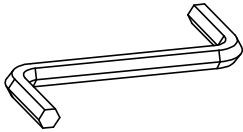
* \$ + % &


* \$ - (\$ + + \$) +

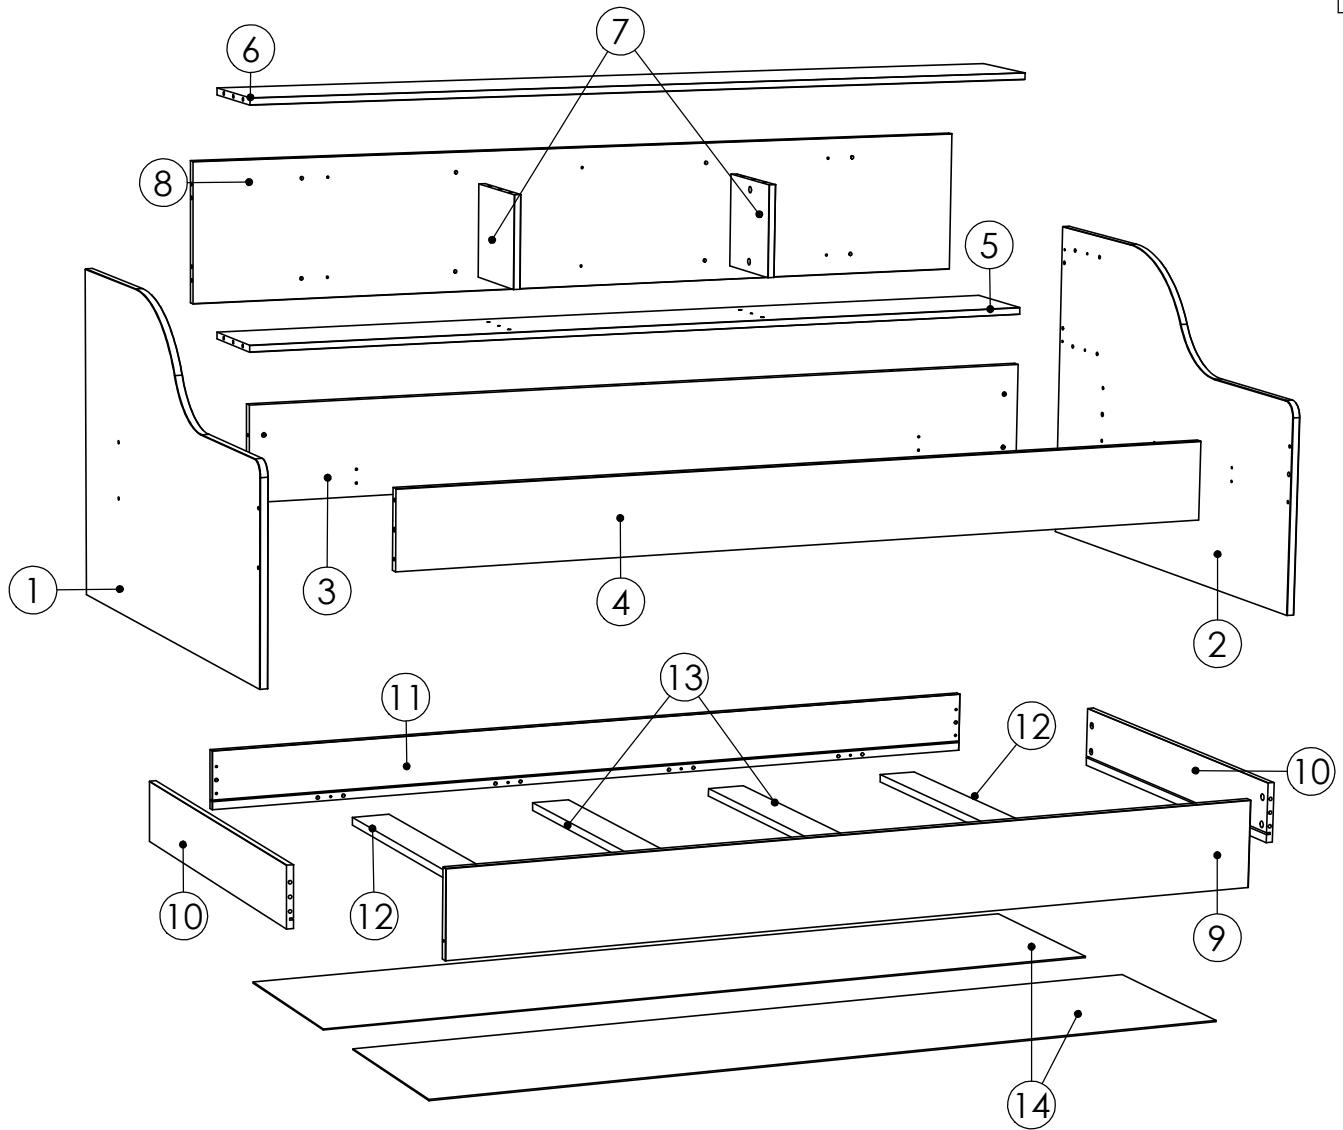

N° PIECE	QTE	Longueur	Largeur	Colis
1	1	1160	750	1/3
2	1	1160	750	1/3
3	1	1940	224	2/3
4	1	1940	180	2/3
5	1	1940	220	2/3
6	1	1940	220	2/3
7	2	218	218	1/3
8	1	1940	330	2/3
9	1	1930	200	3/3
10	2	900	140	3/3
11	1	1930	140	3/3
12	2	900	90	3/3
13	2	900	90	3/3
14	2	1910	458	3/3

130

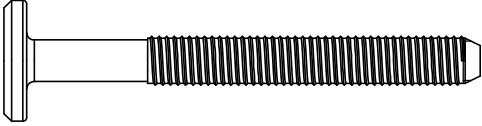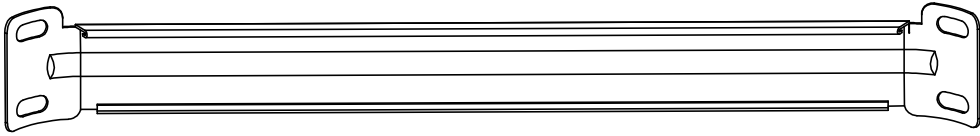

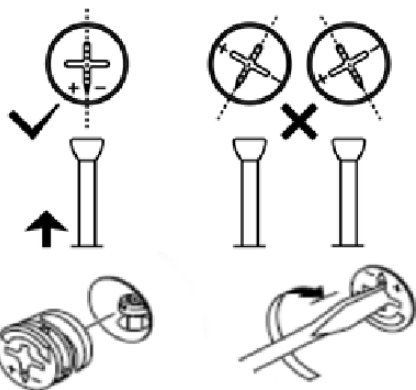

			
4	5	7	8
			
9" 80#		9580	
1		#0	
			
		1	
			
6	9 :08 "1	-	01
			
2	9 "#		
01			
			
/	9 18 "	.	"




Avant de raccorder les excentriques, bien s'assurer que la position de départ est correcte avant d'insérer le boulon de connection.



Puis tourner dans le sens horaire jusqu'à la butée.


1

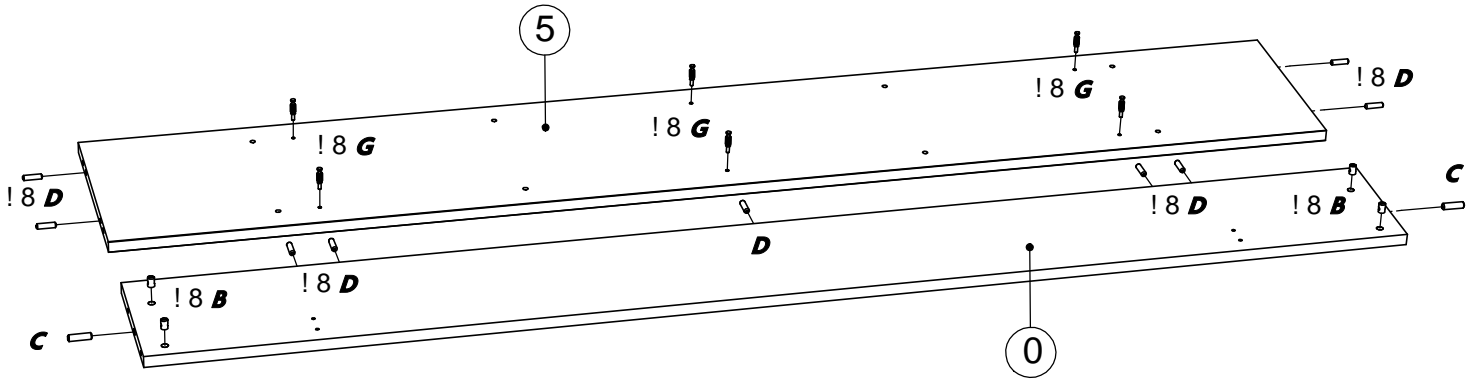 7 B8 1	 9" 80# C8!	 9580 D8 <	 G8
--	---	--	--




2

 9580 D8 "	 G8 1
---	--


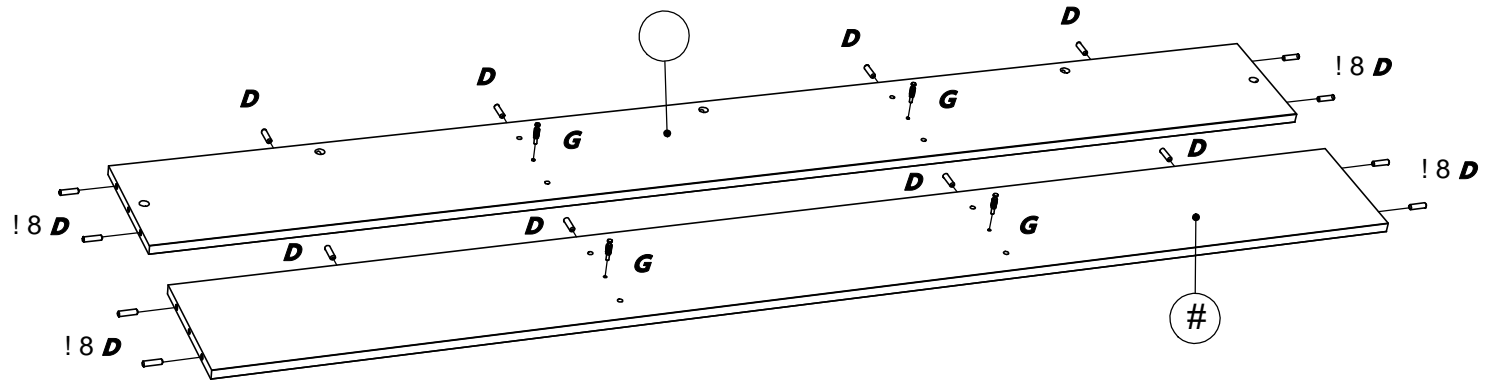


3


 7 B8 1	 9" 80# C8!	 9580 D8 5
--	---	---

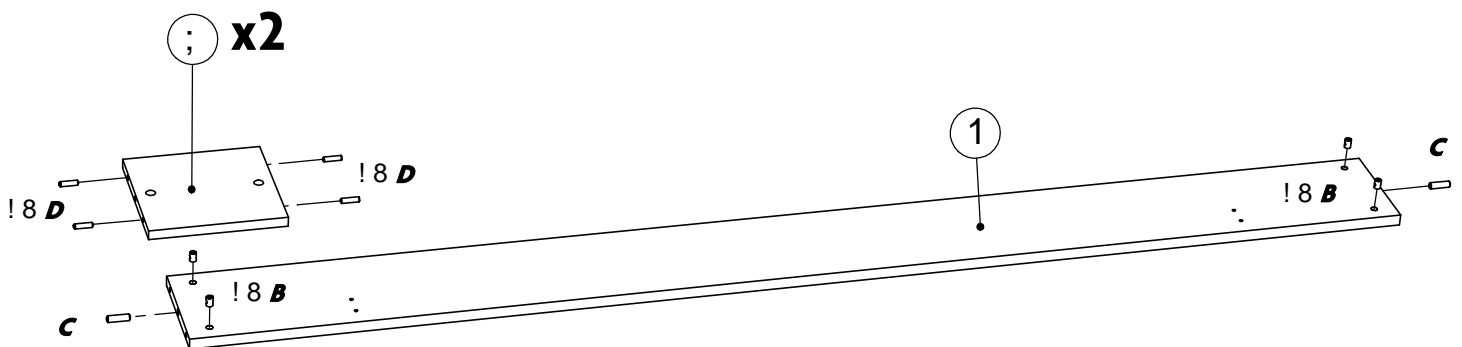


4

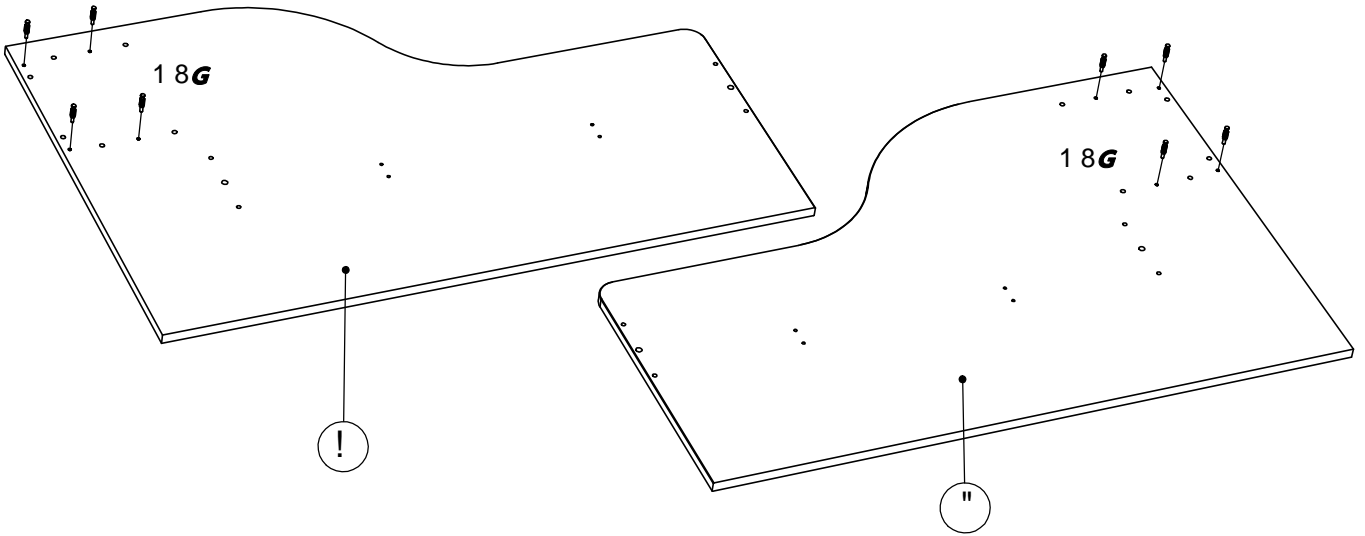

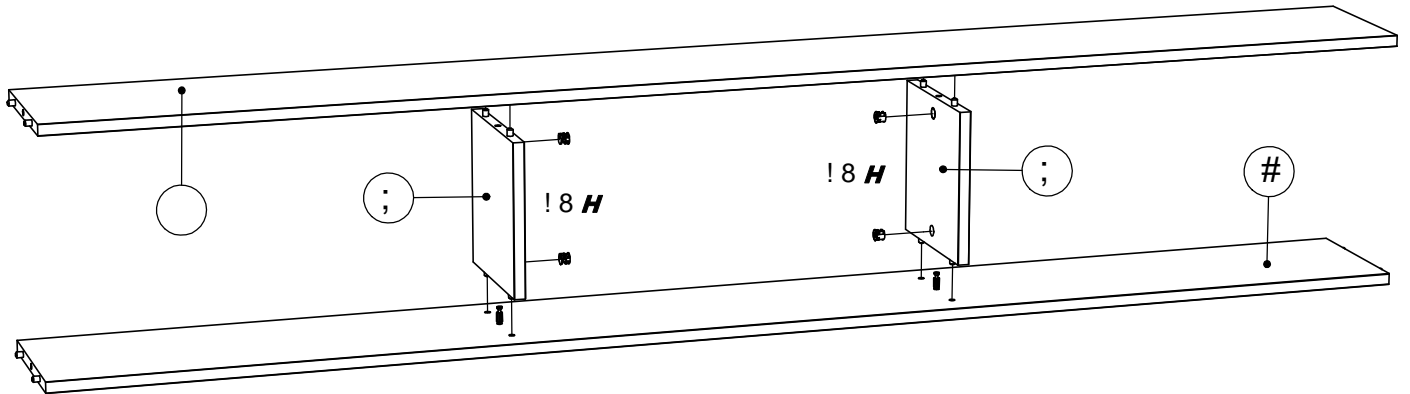


5

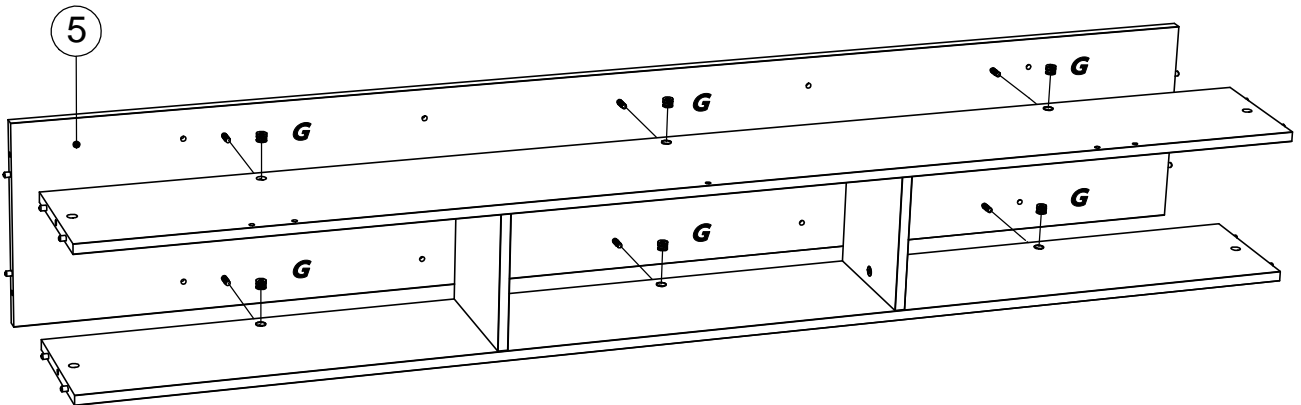


6





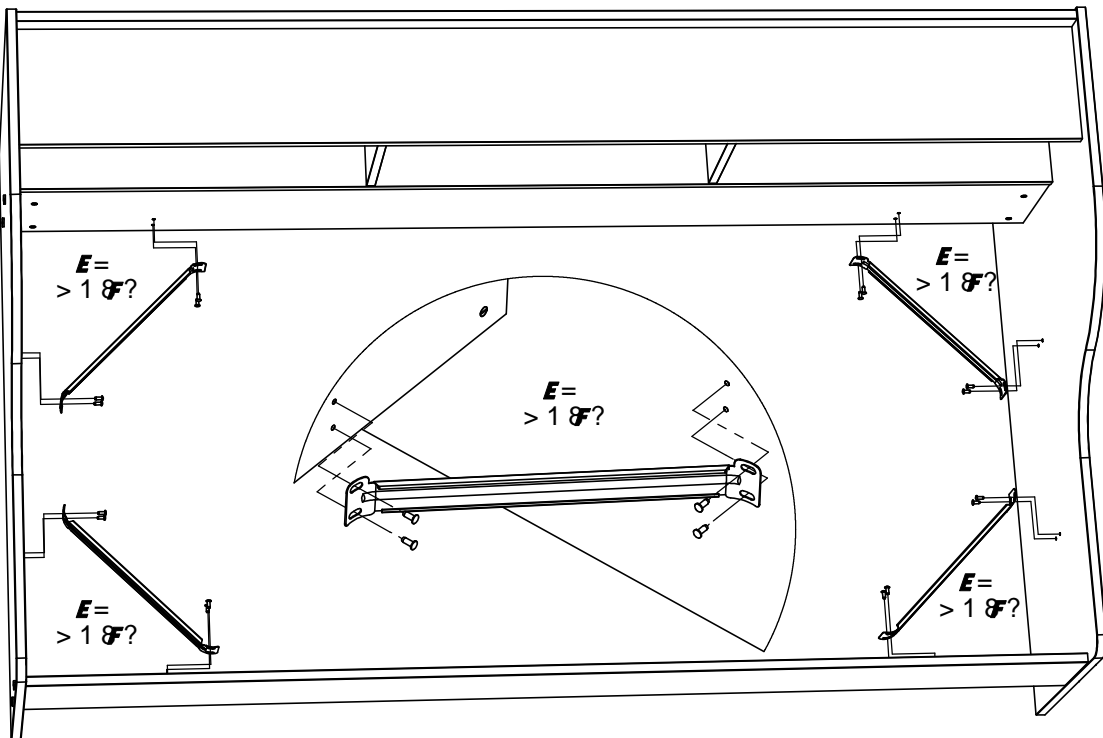
7

 <p>7 8 A85</p>	 <p>9 "# H85</p>	 <p>K</p>
--	--	---

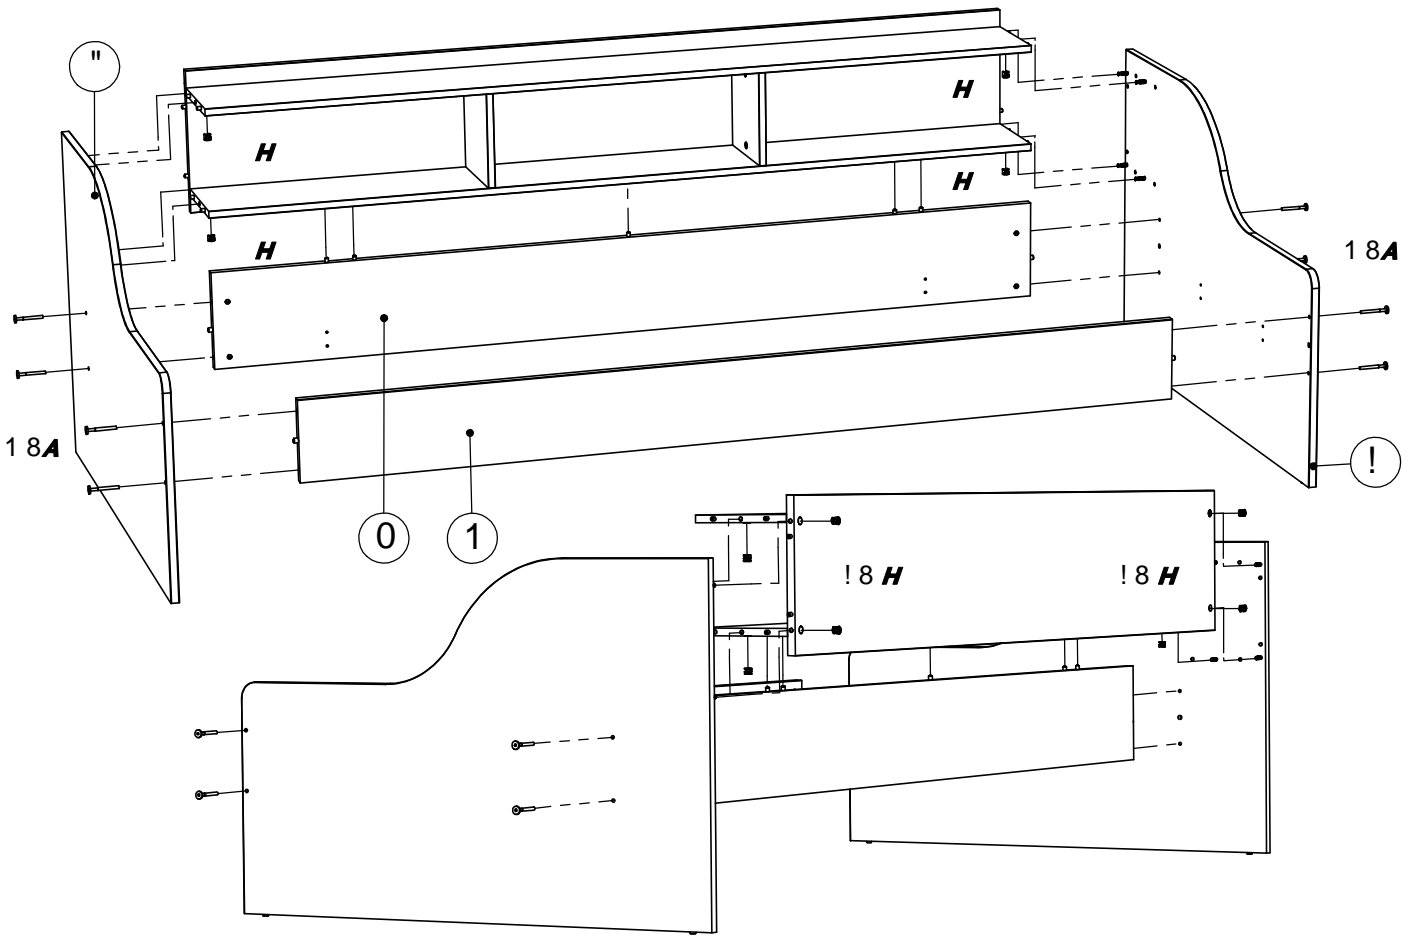





8

 <p>E81</p>	<p>9 :08 "1 F 8 "</p> 
--	--




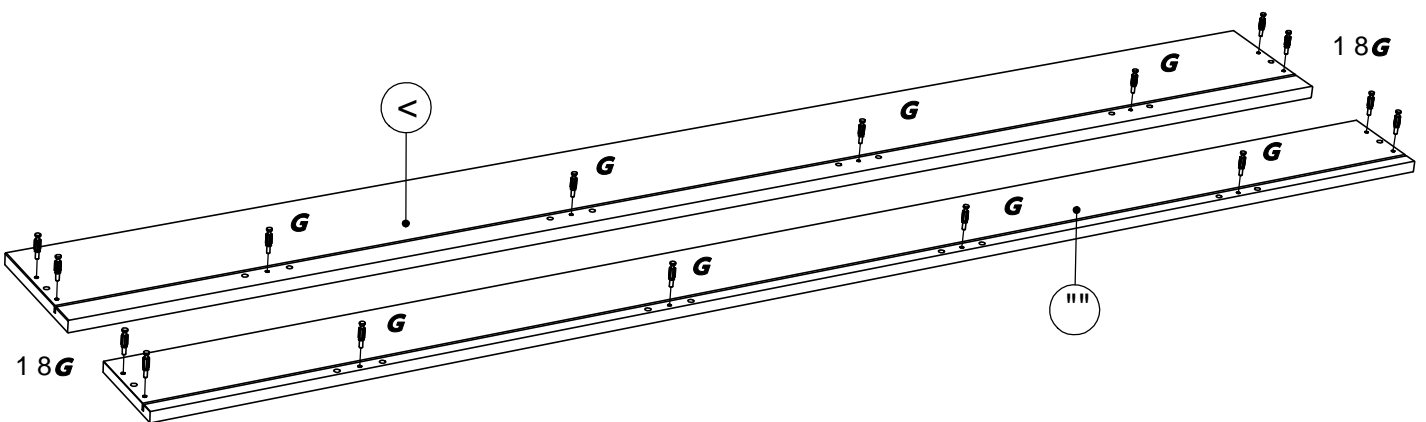
9

<p>9580</p>  <p>D8!</p>	 <p>I8</p>	<p>918"</p>  <p>J8!"</p>
---	--	--

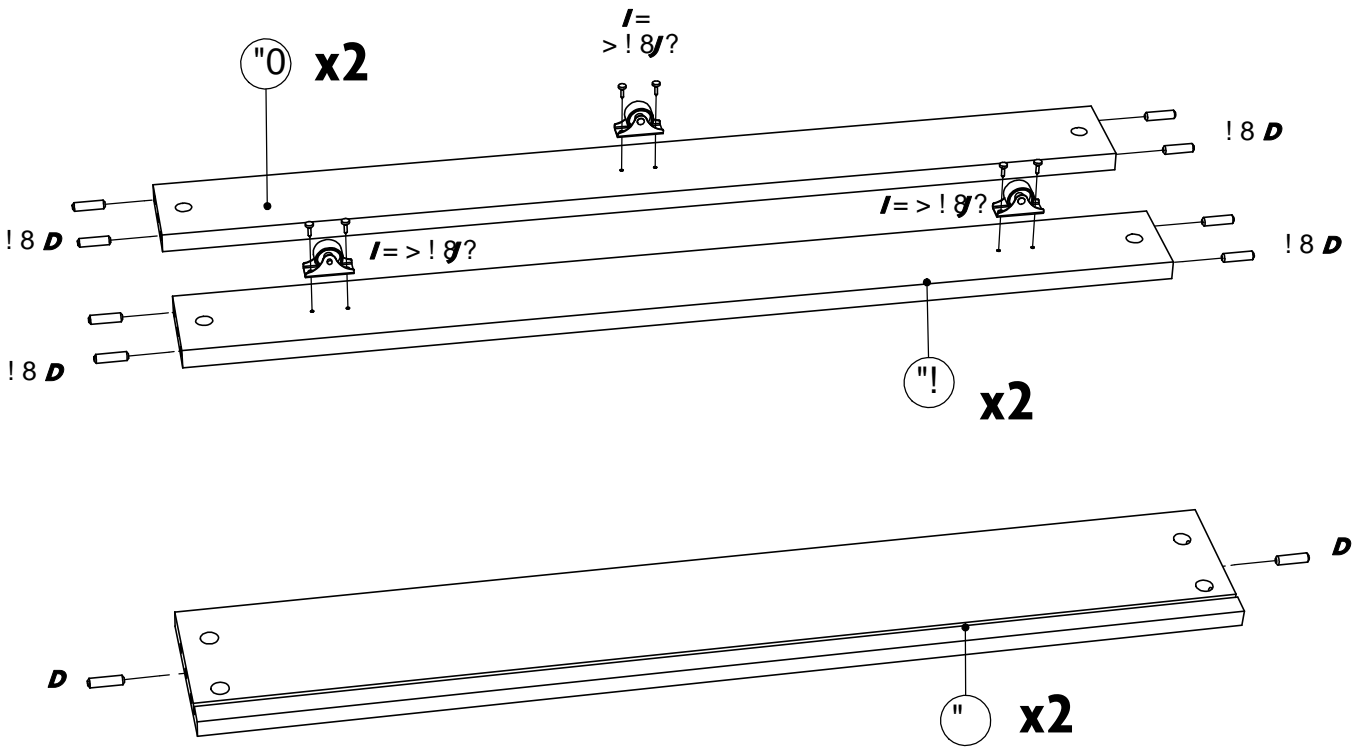


10

 <p>G8"</p>




11

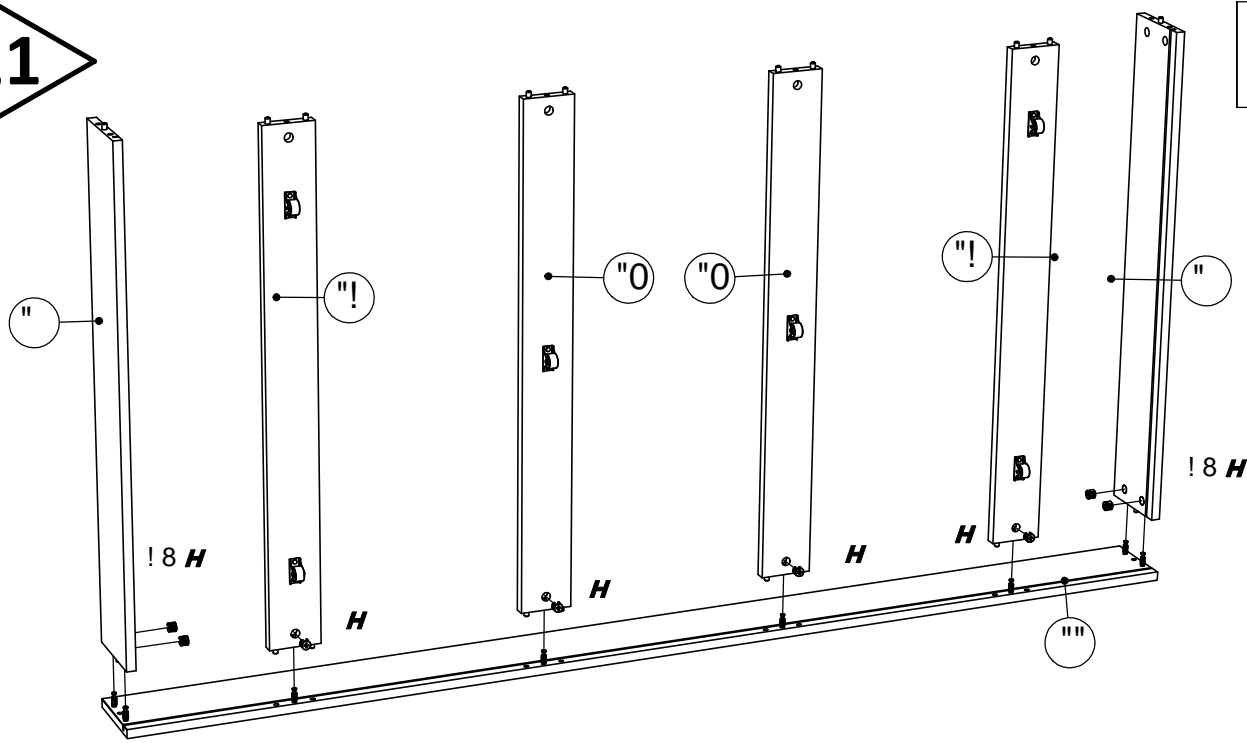

9"#
H85

12

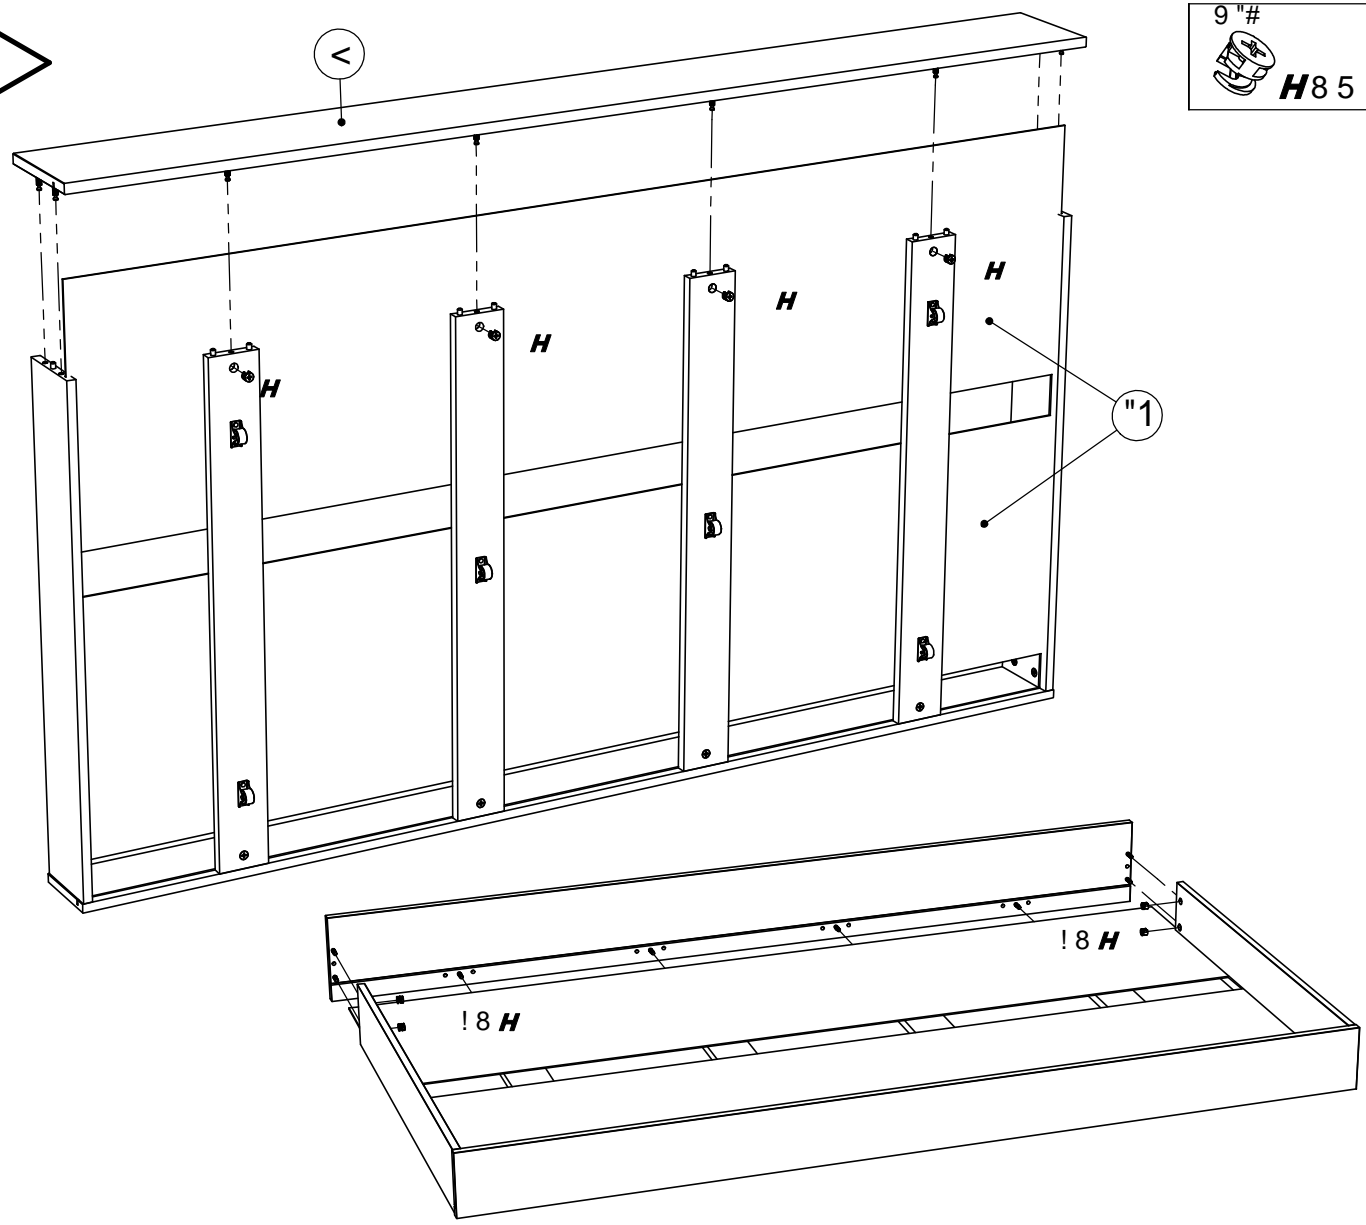

9"#
H85